



THE MOUNTING BOLTS NOT TO GO THROUGH
A+B PLATE AS ONE BOLT

B PLATE
TOP TO CL FIRST HOLE
EXAMPLE 1"

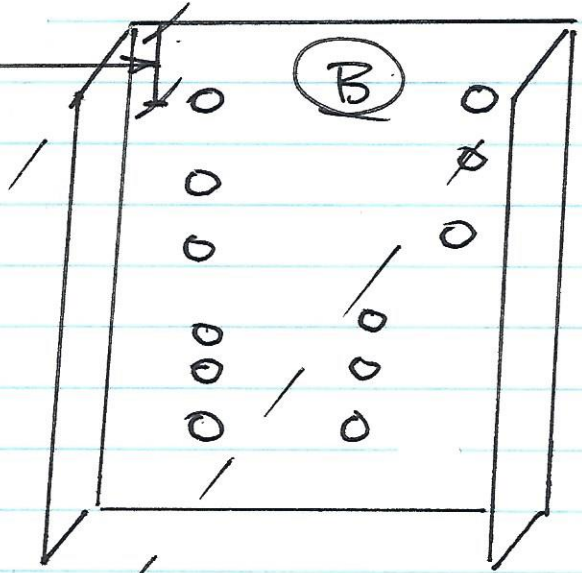

B PLATE
TOP TO CL FIRST
HOLE

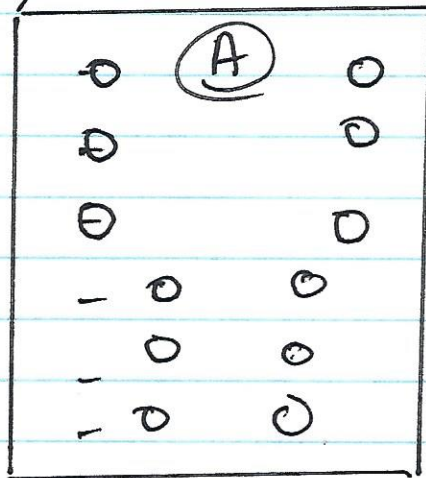

WELD A TO B.

$\frac{1}{2}$ " MATERIAL

RELIEF FOR ORIGINAL
TRANSOM WELD
AREA

