



Typical Solutions

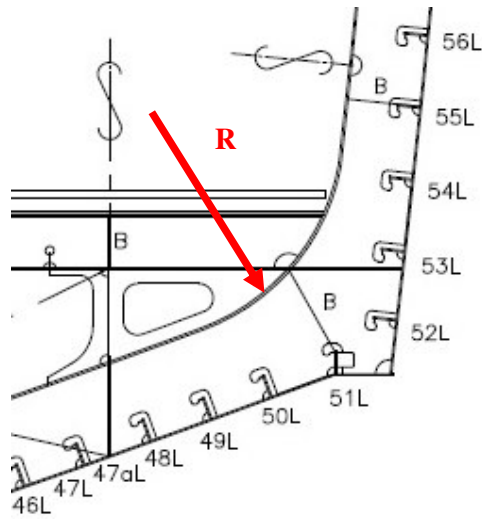

Monohull

Take frame under the sole, with large smooth radius, and butt the sole into the frame

Or

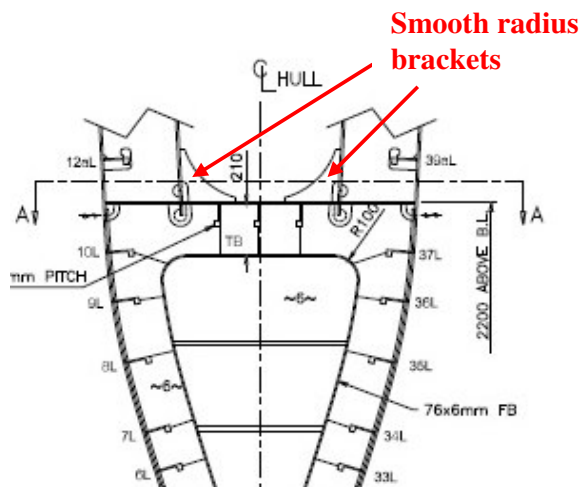

Catamaran

Take frame down onto bottom frame/sole, and add smooth brackets in the corner at each joint.